

STAIR CONSTRUCTION INFORMATION SHEET





Creative Deckworx takes a proactive approach to provide the very best in vinyl membrane and aluminum railing to our home builders and their clients. Part of this commitment relates to the installation of stairs and the railing system on them. We recommend the following two considerations when building stairs...

1. Post Position: for *routed stringers*, the bottom rail post is installed on the bottom tread, inside of the stringer. For *cut stringers*, post position is more flexible, along the bottom tread.

2. Top Kick Plate Position: when installing vinyl, flashing is used on the outside edges of the deck. In order to maintain the watertight seal of the vinyl membrane solution, we prefer to have the steps installed behind the vinyl (ie: the top step kick plate comes up behind the flashing.)

Z:\CDW\daddy.dwg
DATE: 6/16/2010 3:16:18 PM, Eileen Shipley

PROJECT No. _____
 BUILDER: _____
 ADDRESS: _____
 DRAWN BY: _____
 PAGE: _____

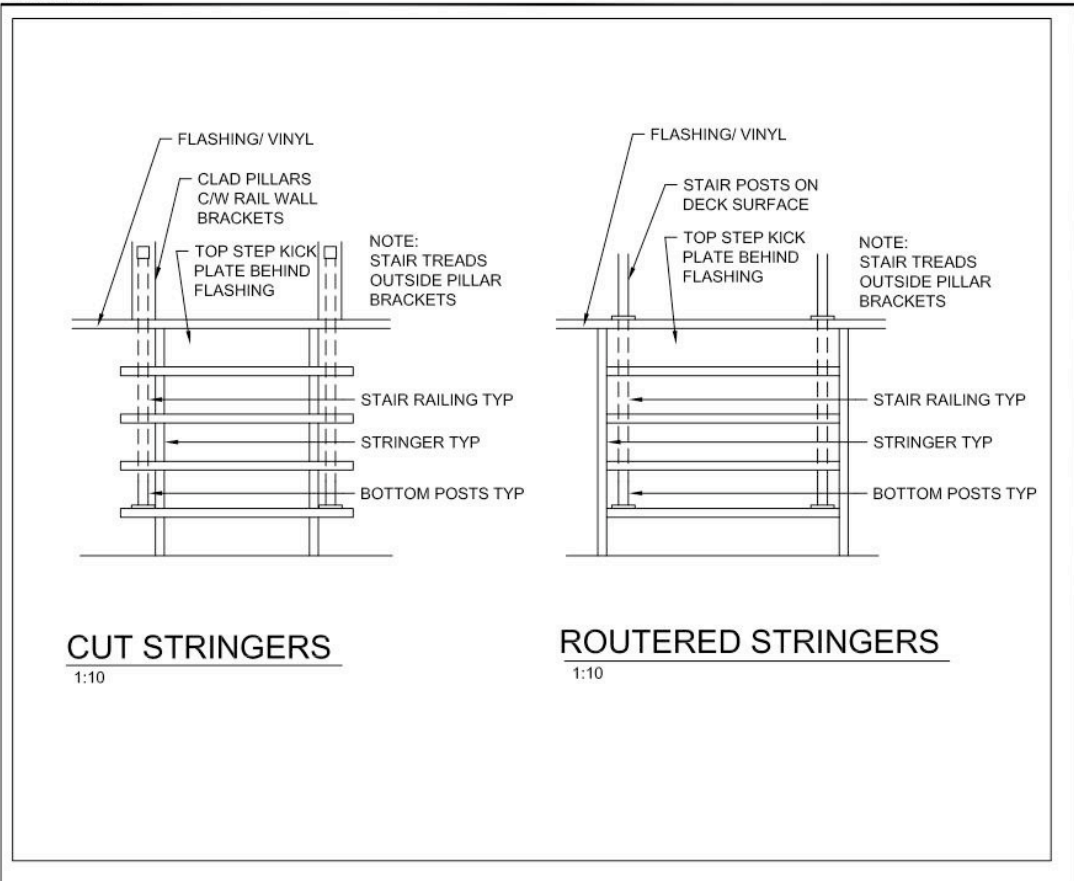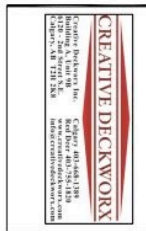

Should you have any questions or concerns, please do not hesitate to contact us at your earliest convenience.

Thank you, from Creative Deckworx.